


HDC Chamber Connections



Heated Bed



Earth Ground



Bed



From	Cable colour/size	To Pin
Heated bed L	Used Supplied	1
Heated bed N	Used Supplied	2
Aluminium Bed	Green silicon/18	3
N/C		4
N/C		5
Heater Thermistor	Used Supplied	6
Heater Thermistor	Used Supplied	7
N/C		8
Anvil Sensor	white/22	9
Anvil Sensor	white/22	10



Chamber



Fan chamber

From	Cable colour/size	To pin
Chamber Thermister	White/24	1
Chamber Thermister	White/24	2
FAN Tacho	Blue/24	3
Fan PWM	White/ 24	4
Fan Chamber +24	Red /18	5
Fan Chamber gnd	Black/18	6




Earth Ground


From	Cable colour/size	To Pin
Chamber Heater L	Brown Silicone/18	1
Chamber Heater N	Blue Silicone/18	2
Chamber Heater E	Green Silicone/18	3
N/C		4
N/C		5
N/C		6

HDC Connector Assembly


See Drawing Mains connections

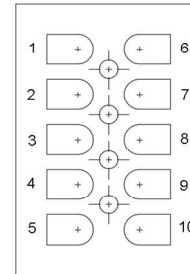

Socket view of screw terminals

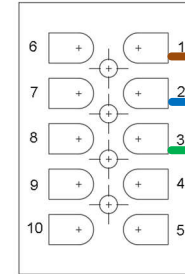


Plug view of screw terminals

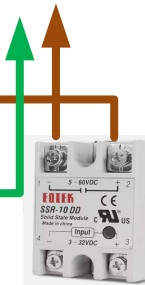


SSR Bed heater

From Pin	To
1	SSR Terminal 2
2	Blue Terminal Block
3	Earth Terminal Block
4	N/C
5	N/C
6	TENP 3/VSSA
7	TENP 3/temp3
8	N/C
9	IO_2/io1in
10	IO_2/GND

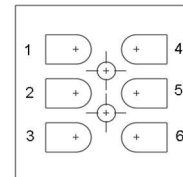

Socket view of screw terminals

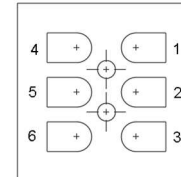

Plug view of screw terminals

See Drawing Mains connections



SSR Chamber

FromPin	To Duet
1	TEMP 2/VSSA
2	TEMP 2/temp2
3	out6.tach
4	IO_0_out
5	OUT2/V_FUSED
6	OUT2/out2

From pin	To
1	SSR Terminal 2
2	Blue Terminal Block
3	Earth Terminal Block
4	N/C
5	N/C
6	N/C

Place a blob of RTV over the L and N connections , safety precaution in case the screws come loose!