


HDC Connections



Heated Bed



Bed



Chamber



Chamber lighting



Fan chamber



Earth Ground



Chamber Heater


From	Cable colour/size	To 10 pin socket Pin
Heated bed L	Used Supplied	1
Heated bed N	Used Supplied	2
Aluminium Bed	Green silicon/18	3
		4
		5
Heater Thermistor	Used Supplied	6
Heater Thermistor	Used Supplied	7
		8
Anvil Sensor	white/22	9
Anvil Sensor	white/22	10

From	Cable colour/size	To 6 pin Socket pin
Chamber Thermister	White/26	1
Chamber Thermister	White/26	2
Chamber Lighting +	Red/18	3
Chamber Lighting -	Black/18	4
		5
		6


Chamber heater L	Brown Silicone/18	1
Chamber heater N	Blue Silicone/18	2
Chamber heater E	Green Silicone/18	3
Fan PWM	White/ 22	4
Fan Chamber +24	Red /18	5
Fan Chamber gnd	Black/18	6

HDC Connector Assembly

See Drawing Mains connections

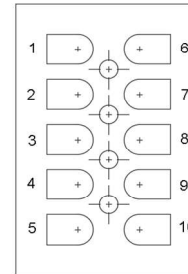

Socket view of screw terminals

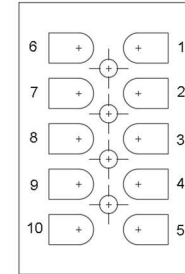


Plug view of screw terminals




SSR Bed Heater

10 Pin Plug	Duet Pins
1	N/C
2	N/C
3	N/C
4	N/C
5	N/C
6	TENP 3/VSSA
7	TENP 3/temp3
8	N/C
9	IO_2/io1in
10	IO_2/GND

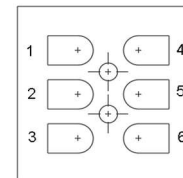


Socket view of screw terminals

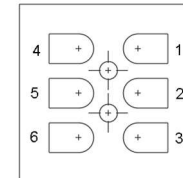


Plug view of screw terminals

6 Pin Plug	Duet Pins
1	TEMP 2/VSSA
2	TEMP 2/temp2
3	POWER IN_Vin
4	POWER IN_gnd
5	N/C
6	N/C

See Drawing Mains connections

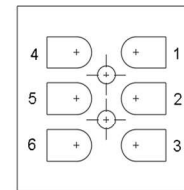

Plug view of screw terminals

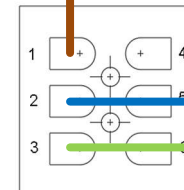

Socket view of screw terminals



SSR Chamber

6 pin Socket	Duet Pins
1	N/C
2	N/C
3	N/C
4	IO_0_out
5	OUT2/V_FUSED
6	OUT2/out2

Place a blob of RTV over the L and N connections , safety precaution in case the screws come loose!