


HDC Connections

From



Heated
Bed



Bed



Chamber



Chamber
lighting



Fan chamber



Earth Ground




Chamber Heater

From	Cable colour/size	To 10 pin socket Pin
Heated bed L	Used Supplied	1
Heated bed N	Used Supplied	2
Aluminium Bed	Green silicion/18	3
		4
		5
Heater Thermistor	Used Supplied	6
Heater Thermistor	Used Supplied	7
		8
Anvil Sensor	white/22	9
Anvil Sensor	white/22	10


From	Cable colour/size	To 6 pin Socket pin
Chamber Thermister	white/26	1
Chamber Thermister	white/26	2
Chamber Lighting +	Red/18	3
Chamber Lighting -	Black/18	4
		5
		6

From	Cable colour/size	To 6 pin Plug pin							
Chamber heater L	Brown Silicone/18	1							
Chamber heater N	Blue Silicone/18	2							
Chamber heater E	Green Silicone/18	3							
		4							
Fan Chamber +24	Red18awg HT	5							
Fan Chamber gnd	Black18AWG HT	6							

HDC Connector Assembly

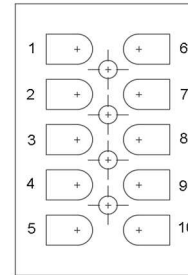


Socket view of
screw terminals

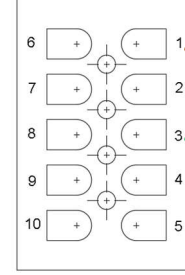

Plug view of
screw terminals

See Drawing Mains connections

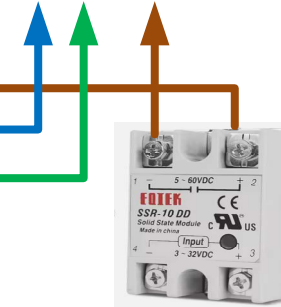

SSR Bed Heater


To Duet PCB

10 pin Plug


- 1 N/C
- 2 N/C
- 3 N/C
- 4 N/C
- 5 N/C
- 6 TEMP 3/VSSA
- 7 TEMP 3/temp3
- 8 N/C
- 9 IO_2/io1.in
- 10 IO_2/GND

6 pin Plug

- 1 TEMP 2/VSSA
- 2 TEMP 2/temp2
- 3 POWER IN_Vin
- 4 POWER IN_gnd
- 5
- 6

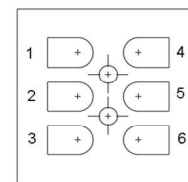


Socket view of
screw terminals

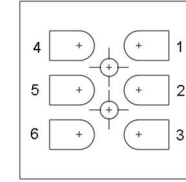

Plug view of
screw terminals

See Drawing Mains connections

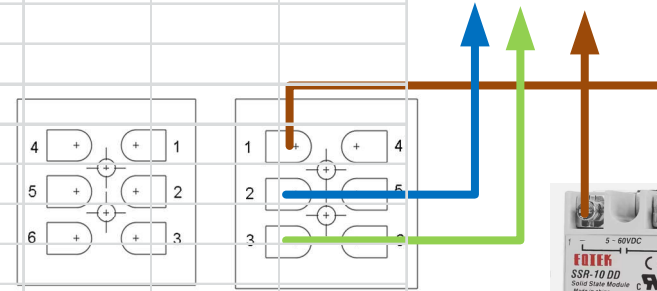

SSR Chamber

6 pin Socket

- 1 N/C
- 2 N/C
- 3 N/C
- 4 N/C
- 5 OUT2/V_FUSED
- 6 OUT2/out2

Place a blob of RTV over the L and N connections , safety precaution in case the screws come loose!